
# inspired LED

### **Wireless Wall Touch Dimmer**



SKU #8562 For use with SKU #3762

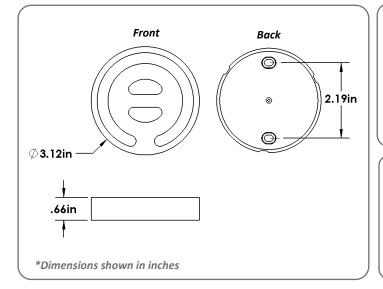

#### **Instructions:**



#### Troubleshooting-

- 1. For best installation results, use two people: one person to plug in power, one to press control buttons
- 2. If lights turn on but do not dim, ensure power supply is plugged into side of receiver marked "power", and LEDs into "LED". Reversal will prevent dimming.
- 3. Faint red light between on/off button indicates power, if no light is visible when using remote, replace batteries.

The Wireless Wall Touch Dimmer combines with Multi-Zone Dimmable Receivers (sold separately) to create an elegant and convenient solution for dimming multiple Inspired LED plug & play systems using a touch sensitive dimming wheel. Compatible with 12V or 24V LED strips and plug-in power supplies, this product allows for multiple light zones to be controlled in sync.

#### **Product Features:**

- Compatible with multi-zone dimmable receiver modules (sold separately)
- Quick on/off functions with 0-100% dimming, smart memory function retains most recent settings
- Newly developed wall mounted controller with elegant and fashionable appearance

#### Specifications:

- Max Load for dimmable receiver- 6 AMPS
- Compatible with 12V or 24V DC plug-in power supplies
- Remote controller requires (2) AAA batteries (included)
- Remote RF range up to 30 meters

## $(\epsilon)$

#### To Install-

- 1. Remove the back of the remote by rotating to the right (a small screw driver can then be placed in the screw hole to gently leverage the back away from the remote).
- 2. Using the provided screws, install the back of the remote on the intended surface with the arrow facing up.
- 3. Ensure batteries are installed (included).
- 4. Press remote onto back with arrow facing up and rotate to the left to affix in place.

#### Pair Remote Modules to Receiver Modules (sold separately)-

- 1. Install all LED lights according to their instructions.
- 2. Connect lights to side of receiver marked "LED".
- 3. Plug 12/24V DC power into side of receiver marked "power".
- 4. Within <u>3 seconds</u> of connecting power, press the ON button 3 times. Lights fade on & off 3 times to indicate success.
- 5. Repeat steps 1-4 to pair additional receivers.

#### Remove Remotes from Receiver Modules-

- 1. Remove and reconnect 12/24V DC power to receiver module.
- Within <u>3 seconds</u> of connecting power, rapidly press the currently synced Zone button ON (up) <u>five times</u> in a row.
- 3. Lights will fade on & off 10 times to indicate successful desynchronization.





